



REFERENCE SHEET

PHOTO PAPER  
INSTANT DRY SOFT GLOSS PHOTO PAPER

762.11

*A lignin and acid free instant dry ink jet photo paper for high-quality color images on a bright white background. An economical paper that maintains excellent color densities while exhibiting good light fade and water resistance. Paper is designed as a “universal” product for use in all ink jet printers.*

Availability: 4 x 6, 8.5 x 11, 11 x 17, 10 x 15 cm, A4, and A3 sheets.

Features, Advantages, & Benefits

Feature	Advantage	Benefit
Instant dry	Smear Resistant	No waiting for your image to dry.
Excellent Color Gamut	Elegant vivid look	Better color contrast
Universal	Can be used on all printer platforms which include HP, Epson, Canon, and Lexmark.	You only have to use one SKU for all printers.

Technical Properties

Basis Weight/Thickness:	230 gsm/11.0 mil nominal
Opacity, %:	98 minimum
Brightness (Image Side):	94 minimum
Whiteness (Image Side):	105 minimum
60° Gloss:	40 minimum
Optimal Service Environment:	Between 59° and 86°F and 30% to 70% RH.
Ideal Storage Conditions:	Between 59° and 77°F and 30% to 70% RH.
Shelf Life:	Minimum of 2 years from Arkwright ship date when stored under ideal storage conditions (see above).

## PRINTING INSTRUCTIONS

1. Handle paper by the edges to avoid fingerprints.
2. The glossier surface is the imaging side of the paper.
3. For multiple images, fan the required number of sheets before stacking in paper tray.  
Note some printers may require single-sheet feeding.
4. For *Top Feed Printers* load the paper with image side facing towards you.  
For *Bottom Feed Printers* load the paper with image side face down in the tray.

## OTHER INFORMATION

- Check your printer manual for additional printing instructions.
- Before printing final image, produce on economy grade ink jet paper to test for layout and design.
- Keep product in closed package between uses; store in a cool dry place.
- Best results are achieved with printers designed for photo quality printing.
- Personal preferences and individual printing conditions can vary.
- For best results, printer settings may be altered.
- Experiment with different settings to achieve your preferred print result.
- Increasing the dpi setting improves image quality but slows down print speed.
- Printers and printer software change frequently.

## Recommended Printer Settings

This information may be updated without prior notice.

CANON	Printer Model	Cartridge	Color/Print/ Mode/Graphics	Paper Type	Print Quality	Advanced (Customize) (Other)
	8200	Standard	Super Photo	Photo Paper Pro		Advanced Tab - Print Quality: Drag slider bar
	S300/S330	Standard	Default	Plain Paper		
	S400/S450	Standard	Default	Plain Paper	Default	
	S500/S520/S530/S530D	Standard	Photo	Glossy Photo Paper	Custom	Advanced>Diffusion, Image & Photo Optimizer, Whole page
	S600/S630	Photo	High	Glossy Photo Paper	High	Effects On>Color>Auto, Image & Photo Optimizer, Whole page
	S800	Standard	Photo	Plain Paper	Custom	Manua>Intensity +10, Brightness>Light
	S900/S9000	Photo	Custom	Plain Paper	Custom	Advanced>Fine, Diffusion, Color Adjustment>Intensity +10, Effects>Image & Photo Optimizer, Apply Whole Page
	bjc-85	Standard	Super Photo	Glossy Photo Paper	Custom	Advanced>Fine, Image & Photo Optimizer Apply Whole Page, Effects> +10 Intensity
	i900D	Standard	High	Photo Paper Plus Glossy	High	
	i320/S750	Standard	Custom	Glossy Photo Paper	Custom	Intensity+10, Effects>Image & Photo Optimizer Pro, Apply Whole Page
	i450/i470D	Standard	Auto	Glossy Photo Paper	Custom	Intensity+10, Brightness-Normal, Effects>Image & Photo Optimizer Pro, Apply Whole Page
	i550	Standard	Custom	Photo Paper Plus Glossy	Custom	Image & Photo Optimizer Pro, Apply Whole Page
	i850	Standard	Photo	Photo Paper Plus Glossy	Custom	Image & Photo Optimizer Pro, Apply Whole Page
	i950	Standard	Fine	Plain Paper	Custom	
	i960	Standard	High	Photo Paper Plus Glossy	High	
	Pixma iP4000	Standard	High	Glossy Photo Paper	High	
Dell	Printer Model	Cartridge	Paper Type	Print Quality	Advanced (Customize) (Other)	
	A940	Color	Photo/Glossy	Best	Default	

Page 2 of 3 - Continued ...

REFERENCE SHEET – 762.11

Page 3 of 3

EPSON	Printer Model	Paper Type	Mode
	C60	Matte Paper – Heavy Wt.	Advanced> Photo-1440 dpi, High Speed-Off, Edge Smoothing ON

	C62	Premium Glossy Photo Paper	Best Photo, Advanced> High Speed Off		
	C64/C84/CX5400/CX6400	DURABrite Glossy Photo Paper	Best Photo, PhotoEnhanced, Advanced>High Speed Off		
	C80	Premium Glossy Photo Paper	Advanced> Photo-1440 dpi		
	C82	Plain Paper	Best Photo, Advanced> High Speed Off		
	780/785/890/980/1280/1290	Premium Glossy Photo Paper	Best Photo, Advanced> High Speed Off, PhotoEnhanced4		
	820	Photo Quality Ink Jet Paper	Best Photo, Advanced> High Speed-Off		
	825	Photo Quality Ink Jet Paper	Best Photo, Advanced> High Speed-Off, PhotoEnhance		
	925	Plain Paper	Advanced> Color Controls> Gamma 1.5, Brightness +6, Saturation -2		
	960	Premium Glossy Photo Paper	Best Photo, Advanced> Photo-1440 dpi, High Speed Off,		
	2100/2200	Plain Paper	Advanced> Photo-720 dpi, High Speed Off, PhotoEnhanced4		
	R200/R300	Glossy Photo Paper	Best Photo, PhotoEnhanced, Advanced>High Speed Off		
	R800	Premium Glossy Photo Paper	Best Photo, PhotoEnhanced, Advanced>High Speed Off		
<b>HEWLETT-PACKARD</b>	<b>Printer Model</b>	<b>Cartridge</b>	<b>Print Quality</b>	<b>Paper Type</b>	<b>Advanced Settings</b>
	100/130/145/230/245	Color	Best	HP Photo Papers	Default
	660 Series/690 Series	Standard or Photo	Best	Glossy Paper	Default
	720 Series	Standard	Best	Deluxe Photo Paper	Default
	850 Series	Standard	Best	Premium Ink Jet Paper	Default
	870/880/890/895/2000	Standard	Best	Premium Photo Paper	Default
	920c/1315/7260/psd2175/Psc2410/psc2510	Color/Photo	Best	Other Photo Papers	Default
	930c/932c/970c/1100c/1220c/2200/6127	Color	Best	HP Premium Plus Photo Paper, Glossy	Default
	940c/950c/960c/990c/2230/cp1160	Color	Best	HP Premium Plus Photo Paper, Glossy	Saturation +1
	Psc1210/3320/3420/3425/4110	Color	Best	Photo Paper	Default
	1215/1218/1315/7130	Color	Best	HP Premium Photo Paper	Default
	3820/6110/7110	Color	Best	HP Premium Plus Photo Paper, Glossy	Brightness +1
	5550/5650/7150/7350/7960/9300/psc2110	Color/Photo	Best	HP Premium Photo Paper, Glossy	Default
	6110	Photo	Best	HP Premium Plus Photo Paper, Glossy	Default
	7550/psc2210	Photo	Normal	HP Premium Plus Photo Paper, Glossy	Default
	7660/7760/psc2210	Color	Best	HP Premium Plus Photo Paper, Glossy	Default
	8150	Tri-Color, Photo	Best	HP Premium Photo Paper, Glossy	Default
<b>LEXMARK</b>	<b>Printer Model</b>	<b>Cartridge</b>	<b>Paper Type</b>	<b>Print Quality</b>	<b>Advanced Settings</b>
	5700/5770/Z51	Standard/Photo	Glossy/Photo Paper	High 1200 dpi	Default
	P707/Z54	Color	Photo/Glossy	Best	Default
	X75/Z23/Z25/Z33/Z35/Z45/Z55/Z65/Z65P	Color	Photo/Glossy	Best	Default
	X1150/X5150/X605	Color	Photo/Glossy	Best	Default
	Z22	Color/Photo	Glossy/Photo Paper	High 1200 dpi	Default
	Z42/Z43	Color/Photo	Glossy/Photo Paper	Maximum 2400 dpi	Default
	Z52/Z53	Color	Glossy/Photo Paper	Maximum 2400 dpi	Default
	Z705	Color/Photo	Photo/Glossy	Best	Default
	Z816	Color	Photo/Glossy	Photo	Default

Arkwright believes that the information set forth herein is reliable. The information is intended for use by persons having technical skill at their own discretion. Since conditions of use are outside of Arkwright's control, we make no warranties, expressed or implied, and assume no liability in connection with any use of this information.

# ARKWRIGHT

Arkwright, Inc., 538 Main Street, Fiskeville, RI 02823, p. 401.821.1000, f. 401.826.3926,  
[www.arkwright.com](http://www.arkwright.com)  
 Arkwright is a registered trademark of Arkwright, Inc. © 2006 Arkwright, Inc., rev. 01 (10/06)