

Light Fabric Transfer


1. Print Reverse Image

- › Once image is created **reverse**. (For contour cutting reverse cut line as well)
- › Nest tiles manually to conserve media.
- › Load Media in printer. (Image side out)
- › Heat setting 30° - 40°C. (Determine best setting based on ink set, environment, and printer)



2. Trim or Contour Cut

- › Load media in cutter and test pressure to ensure blade does not go through release liner.
- › Follow contour cutting equipment manufacturers directions.
- › If not contour cutting trim un-imaged portion of media (simply around total image)

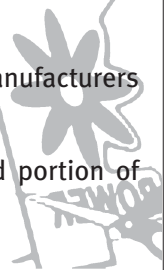

3. Image side down

- › Smooth fabric in area image is to be applied
- › Iron or press if necessary (let cool)
- › Place transfer in desired position on fabric **image side down**
- › 100% cotton fabric will produce the best results



4. Apply with Iron

- › Heat iron (without steam) to maximum cotton setting
- › Place on hard smooth surface
- › Apply heavy pressure
- › 90 seconds 17" x 11"
- › 60 seconds 8" x 11"
- › 30 seconds < 8" x 11"




4. Apply with heat press

- › Pre-heat press to 345°F (174°C)
- › Set to medium pressure
- › 30 - 40 seconds



5. Remove release liner

- › **Allow transfer and fabric to cool**
- › Slowly remove release liner peeling from one corner to the opposing corner at a sharp angle

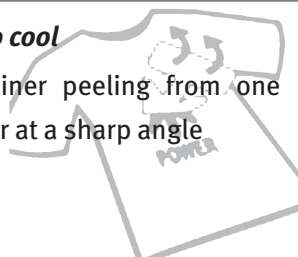

6. Wash Tips

- › Wait 24 hours before washing
- › Turn garment inside out. Cold water wash
- › Remove promptly from wash -
- › Warm tumble dry
- › Do not re-iron graphic

